



How to Update the Firmware of Phantom 4 Pro+ V2.0 Remote Controller

1. Visit the official DJI website and go to the Phantom 4 Pro/Pro+ V2.0 page, download the latest firmware package.
2. Copy the download file (GL300K_xxx.zip) to a Micro SD card.
3. Insert the Micro SD card into the Micro SD card slot of the Remote Controller.
4. Method 1:
Power on the Remote Controller, an update prompt will remind you if a new firmware update is available. Click Install to start updating.
Method 2:
Enter System Settings > System Update, click Local Update on the top-right corner. The latest firmware will show on Micro SD card. Click Update to start updating.

Notes:

- DO NOT insert the Micro SD card to a card reader and use the USB port of the Remote Controller to update.